SLIDING DOOR: PLANNING

SYSTEM AIR-B SYNCHRO S 1200

Version 1.1 (2018-01-21)

easy medium difficult

Installation

Assemble

Subject to technical changes.



CONTENT AND TOOLS

CONTENT:

Content and tools 02 page Product information 03 page Accessories AIR-B Synchro S1200 05 page Accessories AIR-B Synchro S1200 with GTB 06 page Measurenment page 07 Detail drawings 09 page AIR-B Synchro S1200 14 page AIR-B Synchro S1200 with GTB 15 page Cuttting dimensions profiles page 16 Cutting dimension panel / mirror page 17 Stopper for top track page 18

TOOLS:

(without claim of completeness)

Aluminium saw Pencil Drill set (metall) Drilling machine Rubber mallet Allen key set Straight edge (optionally) Wire cutting pliers Water level



VERSION INFORMATION:

Version 1.1: S1200 with bearing / data & illustration added & Instruction for stoppoint

PRODUCT INFORMATION

GENERAL INFORMATION: Preparation

- This manual is part of the product and describes the safe and proper installation of the system. Please read the instructions carefully before installation
- Please note that the assembly should only be done by qualified and trained staff in strict compliance with all details indicated in this document. Improper installation in variation from manufacturer's specification may cause defects and danger, thus endangering the safe fixing of the product as well as the safety of the prospective user. The liability of the manufacturer shall be excluded in case of defects and consequential damages resulting from incorrect assembly of this product.
- Please check the completeness of the delivered parts and check carefully if any transport damages are visible.
- If any parts are damaged or lost, please immediately contact the responsible supplier.
- It is assumed that you have exactly identified all cutting dimensions according to the measurement instruction for **raumplus** products.

SYMBOLE:

Symbol Importance



Risk or danger!



Advice and information



Additional information / other documents



Directional data / direction of movement



"yes" and "right"



"no" and "wrong"



Follow the order

SYSTEM:

System Information: System AIR-B S1200

max. weight of element

= 60 kg

■ min./max. door height

= 700 mm / 2750 mm

■ min./max. door width

= 500 mm / 1400 mm

PRODUCT INFORMATION

GENERAL INFORMATION: Product safety

The System AIR-B S 1200 complies with the prior of the art and the authorized safety rules at the time of delivery.

USE:

Intended use

- The prerequisite for the intended use of our products is the professional installation according to our installation instruction. Sufficient fittings must be available and durably installed to all relevant places.

 The function of the fittings must not be hindered or altered during installation.
- Special solutions are only possible in consultation with raumplus.

Incorrect use

- Risk or danger may occur in the following cases:
- the door system has improperly been installed or maintained
- the safety and installation instructions have not been followed.
- after improper installation or inadequate fixing (e.g. to parts of buildings)
- the maximum weight of the doors has been exceeded.
- improper shock and case loads or other additional loads on the fittings have occured
- the fittings have been used outside.
- body parts or objects got into the closing edges or door runnings during use of the door wing.
- the door system is not used as intended.


Structural modifications

Structural modifications that are not offered as an accessory from **raumplus** may only be attached or installed with permission of **raumplus** GmbH!


ACCESSORIES

AIR-B SYNCHRO S 1200


For colored surfaces please ask your dealer.

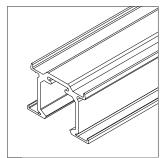




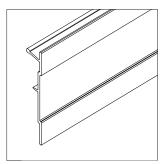


_14.50.0xx

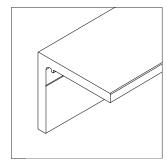


_14.54.020

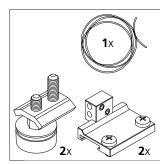


_10.06.065

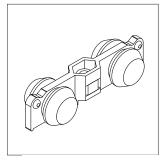


_10.06.200

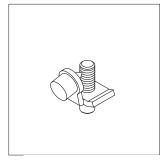


_10.05.060

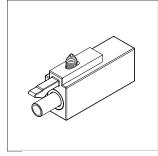

_10.05.017

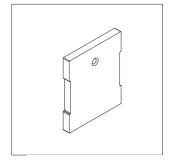

_10.05.xx1

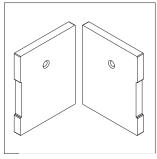

_10.05.xx6 / 10.05.xx7



.10.05.290


- 1_Top track insert AIR
- 2_Cover profile, 60mm
- _Wall connection profile for AIR S42
- 4_Synchro fitting S1200 AIR -B
- _Top roller AIR
- _Stopper for top roller AIR w/o brake
- _Stopper for top roller AIR
- _ End cap for top track insert 40mm, AIR S42
- _End cap for wall connection profile AIR, left

10_ Connector for end cap AIR


ACCESSORIES

AIR-B SYNCHRO S1200 WITH SLIDING DOOR BRAKE


For colored surfaces please ask your dealer.

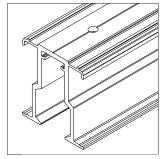




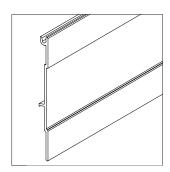


_14.52.0xx

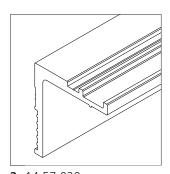


_14.57.020

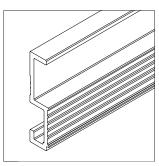


_14.58.020

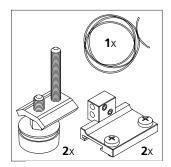

_10.06.066

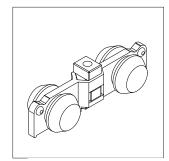


6_10.06.300

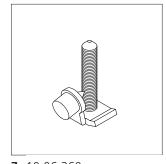


_10.06.360




_10.06.365

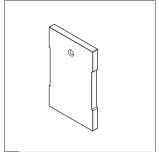

_10.06.xx1

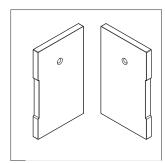

10.06.xx6 / 10.06.xx7

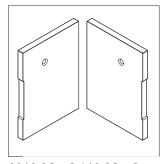

.10.06.xx2 / 10.06.xx3



.10.05.290

- 1_Top track insert for AIR S42 with SDB
- 2_Cover for insert profile AIR S 42 with SDB 80 mm
- _Wall connection profile S42 AIR SDB
- _Wall connection distance profile AIR S 42 with SDB
- _Synchro fitting S 1200 AIR with SDB
- _Top roller SDB AIR
- _Stopper for top roller with SDB AIR
- _Sliding door brake AIR
- _End cap for top track insert S 42 SDB, single, 80 mm


- 10_ End cap for wall connection profile, left / right
- 11_ End cap for wall connection & distance profile, left / right
- 12_ Connector for end cap AIR

_ without illustration:

- _ Screw DIN 914 M3 x 5 for attachment of the cover at the top track (10.06.350)
- _ Screw DIN 571 8 x 50 for Wall connection- and distance profile (recommended)

MEASUREMENT


AIR-B SYNCHRO **\$ 1200**

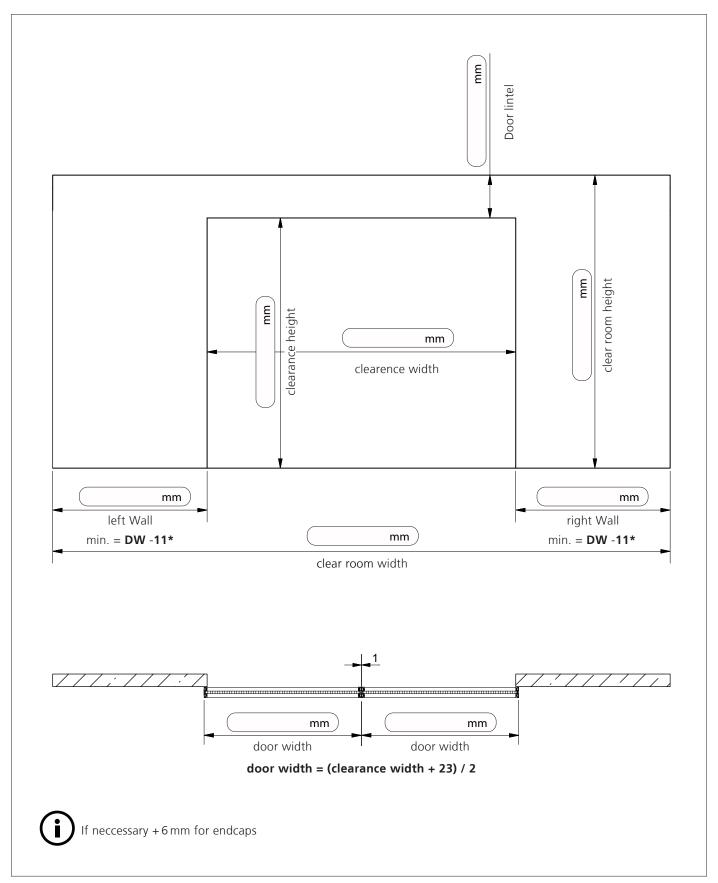

1_ Calculation of the door width


OVERLAP RANGE

AIR-B SYNCHRO **\$ 1200**

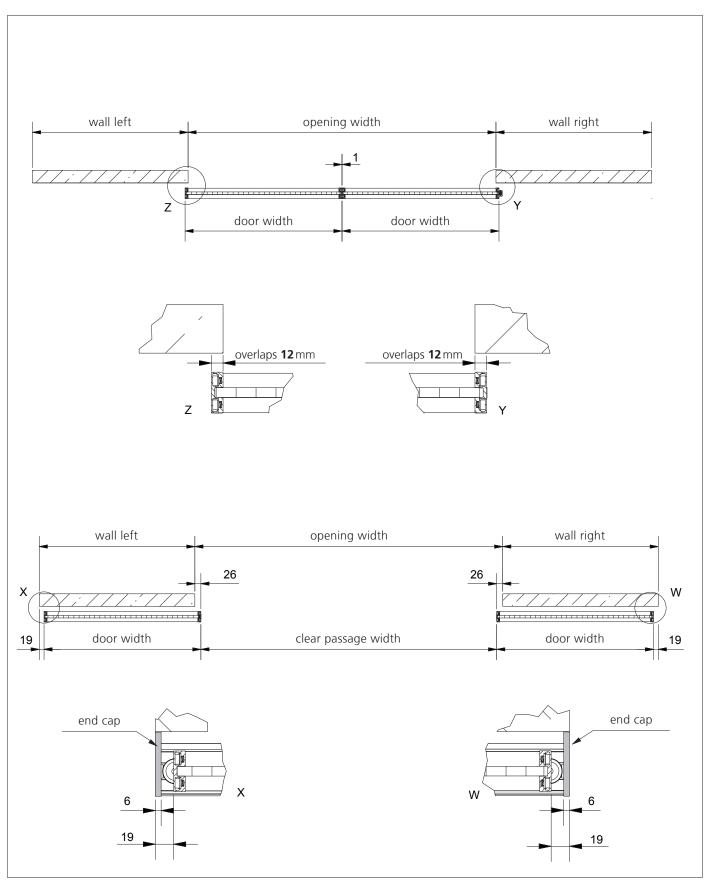


1_ Calculation the passage width


VERTICAL SECTION AIR-B SYNCHRO **S 1200**

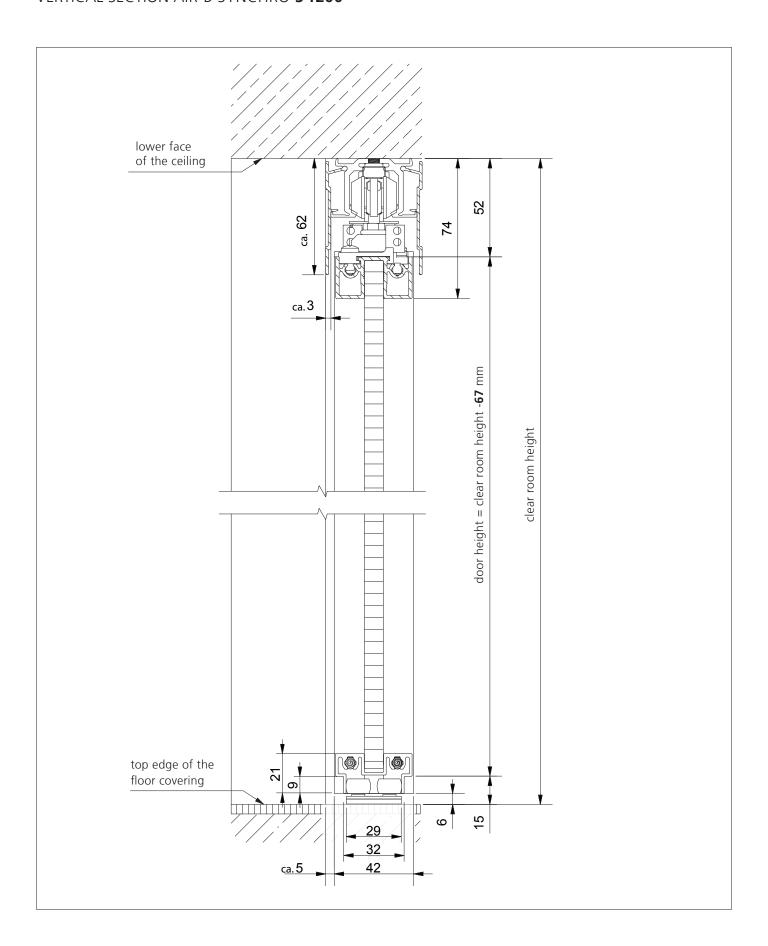


VERTICAL SECTION AIR-B SYNCHRO S 1200 WITH WALL CONNECTION PROFILE

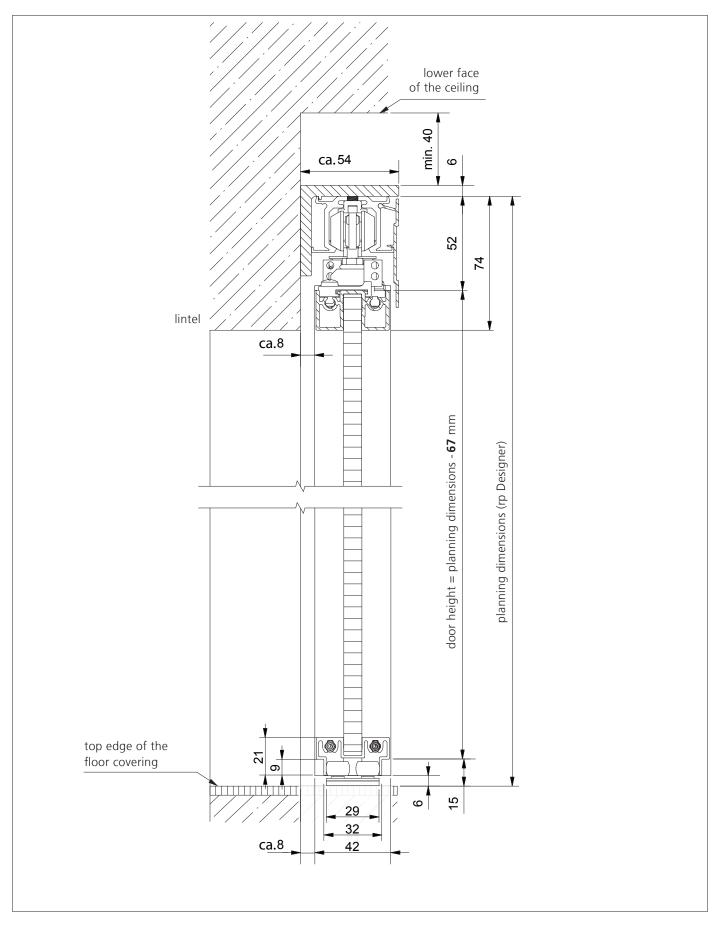


VERTICAL SECTION AIR-B SYNCHRO S1200 WITH SLIDING DOOR BRAKE

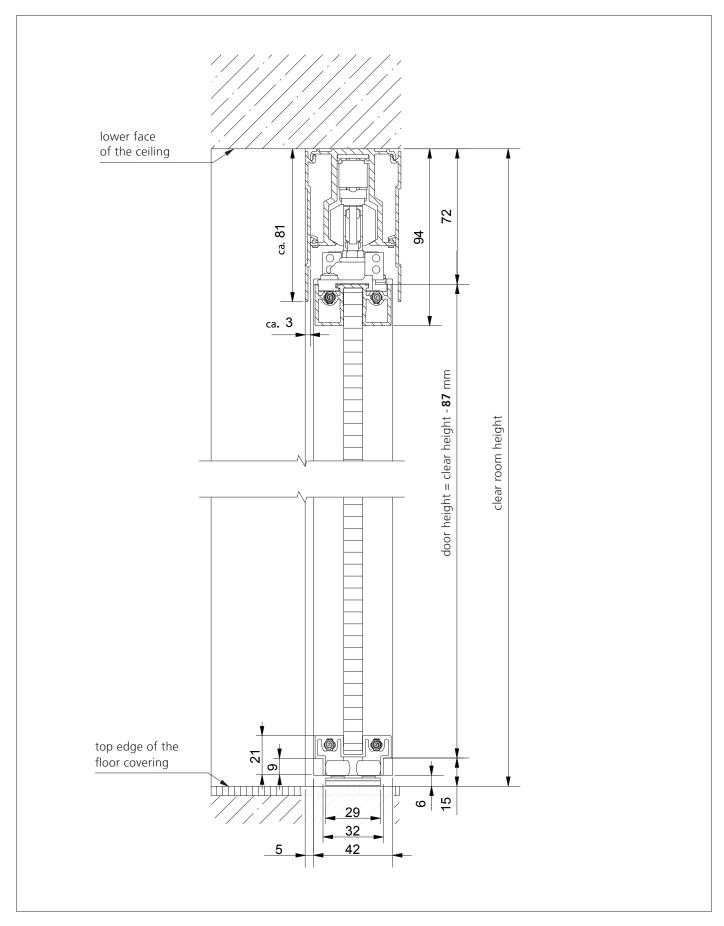

VERTICAL SECTION AIR-B SYNCHRO **\$1200** WITH **SLIDING DOOR BRAKE** AND **WALL CONNECTION** PROFILE

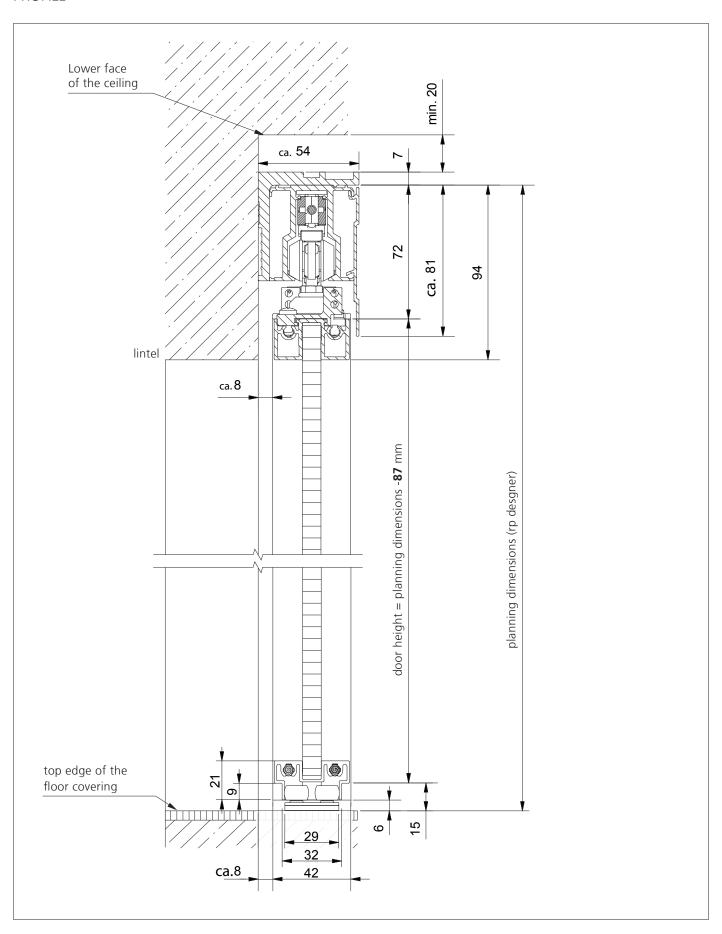


VERTICAL SECTION AIR-B SYNCHRO **\$1200** WITH **SLIDING DOOR BRAKE**, WALL CONNECTION **DISTANCE** PROFILE AND **WALL CONNECTION** PROFILE

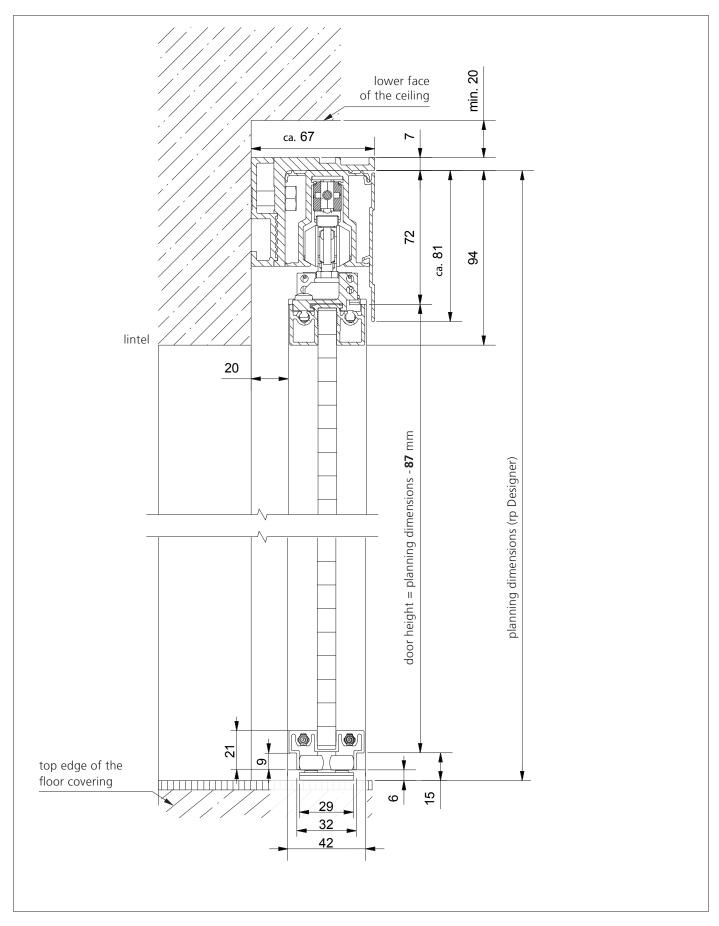

AIR-B SYNCHRO S 1200


EXPLODED DRAWING

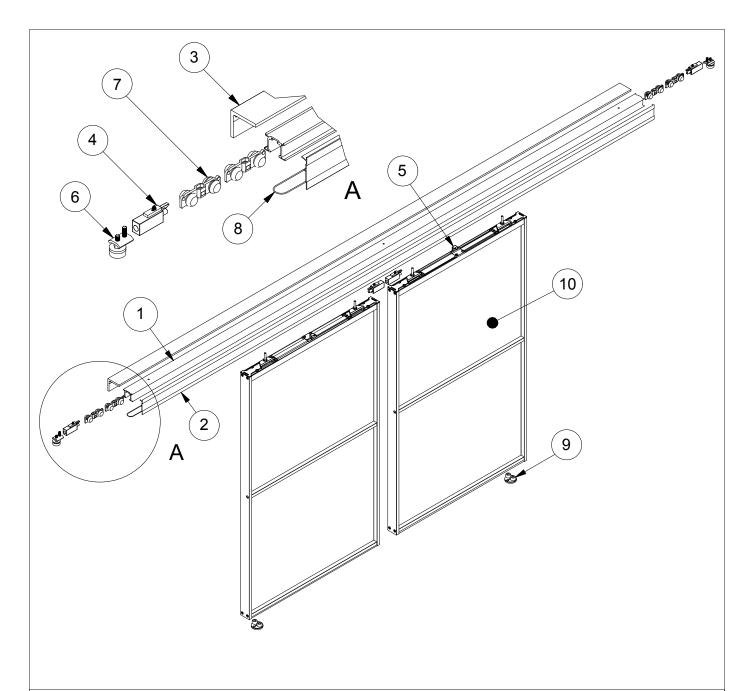

Item list				
Object	Quantity	Item	Item no.	
1	1	Top track insert AIR S 42	14.55.0xx	
2	1	Cover profile, 60 mm AIR	14.50.0xx	
3	1	Wall conn. profile for air \$42	14.54.020	
4	4	Stopper for top roller AIR	10.05.017	
5	2	Door connector S 1200 for synchro fitting air, complete	10.06.065A	
6	1	Synchro fitting S 1200 AIR	10.06.065	
7	4	Top roller AIR	10.06.200	
8	1	Wire for synchro		
9	2	Ground plate with bearing air S34 / air S1200 /	10.06.033 /	
		Distance plate air S34 / S1200	10.06.035	
10	2	AIR-B S 1200	/	

AIR-B SYNCHROS 1200 WITH SDB


EXPLODED DRAWING

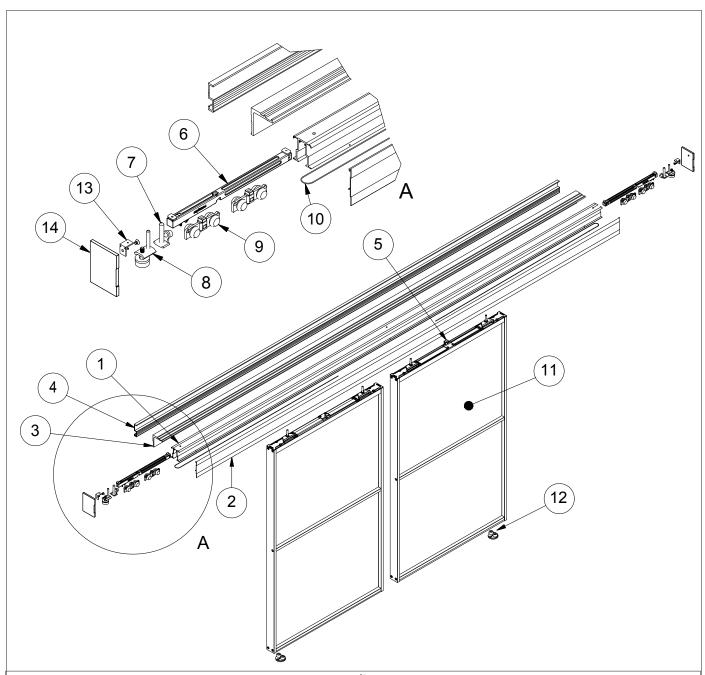

Object	Quantity	Item	Item no.
1	1	Top track ins. for AIR S 42 SDB	14.51.0xx
2	1	Cover profile, 80 mm	14.52.0xx
3	1	Wall conn. profile S 42 AIR SDB	14.57.020
4	1	Wall conn.dist. prof. AIR SDB	14.58.020
5	2	Door connector \$1200 for synchro fitting AIR complete	10.06.065
6	2	Sliding door brake AIR	10.06.365
7	2	Stopper f. top roller with SDB AIR	10.06.360
8	1	Synchro fitting S 1200 AIR with SDB	10.06.066
9	4	Top roller SDB	10.06.300
10	1	Wire for synchro	10.06.060
11	2	AIR-B \$ 1200	/
12	2	BGround plate with bearing air S34 / air S1200 /	10.06.033
		Distance plate air S34 / S1200	10.06.035

CUTTING MEASURES PROFILES W/O SDB

SITLES AND DRILL PATTERN

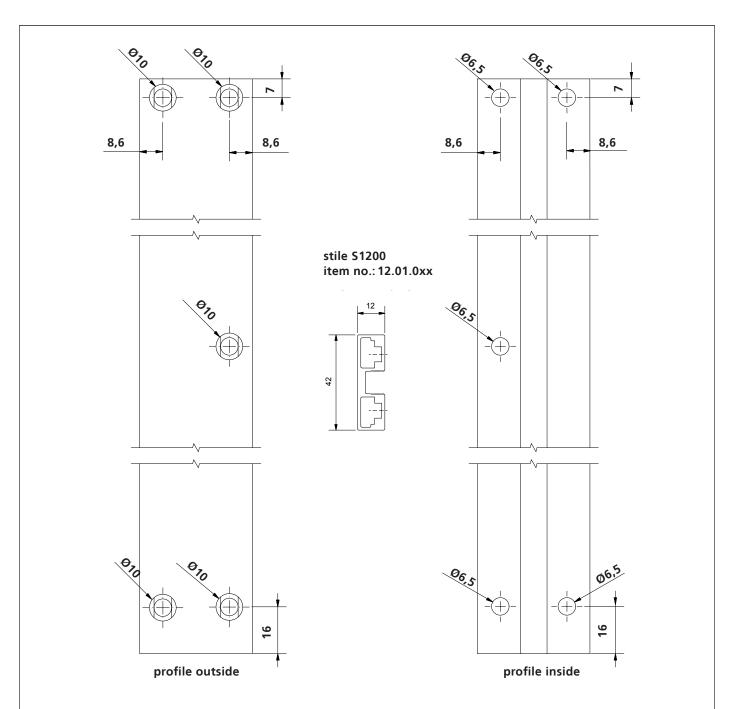

CUTTING MEASURES PROFILES S 1200 AIR:

Door height = clear room height-58 mm

Cross rail length = door width - 24 mm

min./max. door width = 500 mm / 1400 mm min./max. door height = 700 mm / 2750 mm

max. door weight = 60 kgOverlap = 12 mm

CUTTING MEASURES PANEL S 1200 AIR (w/o dividing rail):


Panel height = door height - 16 mm (10 mm)

Panel height = door height - 17 mm (with gasket)

Panel width = door width - 11 mm

CUTTING DIMENSIONS PANEL / MIRROR

HEIGHT MEASUREMENT

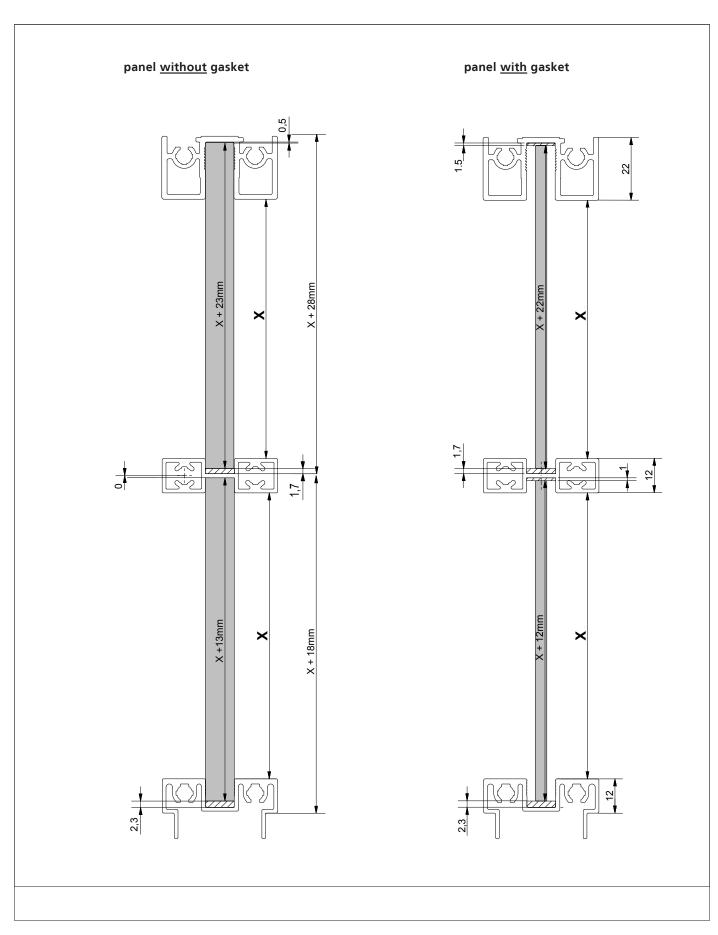

STOPPER FOR TOP ROLLER

